

HMS

KARGO MASTER SAFARI

55025-R1 Installation Instructions



Step 1

- Be sure to have Congo Pro JK A-Frame (55015) and Congo Pro JK Rear Hoop (55026) installed on your 2dr JEEP.

****DO NOT TIGHTEN ANY BOLTS UNTIL ALL BOLTS ARE INSTALLED****



Step 2


- Place the formed end of the roof rail towards the front of the JEEP and install cap using the six Allen bolts. This should clamp around the Congo Pro JK A-Frame (55015).
*See Picture



For TECHNICAL SUPPORT Call: 800-343-7486 Monday - Friday 7:30 A.M. to 4:00 P.M (PST)

Step 3

- Position the roof rails to your liking or 38" apart if installing a Kargo Master Safari Platform.

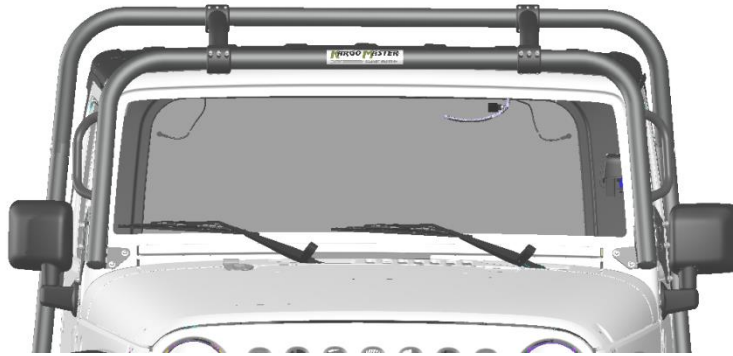

Step 4

- Attach the straight end of the roof rails to the Congo Pro JK Rear Hoop (55026) and install the cap using six Allen bolts. This should clamp around the rear hoop.
*See Picture



Step 5

- **TIGHTEN** all bolts from previous steps.
Your installation is now complete.

