



Installation Instructions



PRODUCT: JK Front Stock Shock Extension Kit

REV: C | 06-25-2015 | II-7041

**READ INSTRUCTIONS IN FULL BEFORE INSTALLATION.
QUESTIONS? CALL 916-631-8071 M-F 7:00 AM – 5:00 PM PST**

The MetalCloak experience includes the ease of installation of our products. We design for most contingencies, but installation may be different based on different Jeep condition, configuration and/or year.

We are continually trying to improve our products and instructions – please help us by providing feedback and pictures if you find any part of the instructions that do not match your particular Jeep or are not easily understandable.

If you have any difficulties at all, please give us a call. Thank you and enjoy your MetalCloak Products!

IMPORTANT NOTE: We use Stainless Steel Hardware where possible. Therefore, a tube of Silver Anti-seize is provided and should be used on all bolts—only a small amount is needed.

WARRANTY INFORMATION: This article is sold without warranty expressed or implied. No warranty or representation is made as to this products ability to protect the user from injury or death. The user assumes that risk. The effectiveness, warranty and longevity of this equipment are directly related to the manner in which it is INSTALLED, USED and/or MAINTAINED. THE USER ASSUMES ALL RISK. By purchasing this product and opening the packaging, purchasers expressly acknowledge, understand and agree that they take, select and purchase these MetalCloak products from Armored Works, LLC, its affiliates and distributors and agents as is and with all faults. The entire risk as to the quality and performance of these MetalCloak products is with the purchaser. Working on your vehicle can be a dangerous activity. If you are unsure of what you are doing, please leave mechanical or safety critical work to a skilled mechanic. We take no responsibility for the incorrect use and/or installation of MetalCloak products.

Section 1: Tools & Notes on Installation

Tools Required: This list is the recommended tools for ease of installation. Other versions of the same tool can be used. For example, Allen Wrenches instead of Allen Drive Sockets. Be sure to use metric on metric and SAE on SAE.



Socket & Ratchet Wrench

16mm Hex socket
18mm Hex socket



18mm Wrench
5/8" Wrench

Torque Wrench



HOW TO USE THIS GUIDE: The installation guide contains ALL steps for installation. Please read and follow the instructions in order of each page top to bottom, and left to right.

Jeep Model: Instructions may apply to multiple Jeep models, but are labeled separately where appropriate (i.e. TJ vs. LJ).

Options: Because of the number of component options we offer, these instructions may contain steps that will not match your particular configuration. You can skip these steps.

Images: Pictures are provided and parts are labeled throughout the instructions. Each text box contains guidance based on the pictures next to it. The text will refer to alphabetical labels (A, B, etc) found in the images.

Installation Notes: Terms may be used in the body of the instructions that you may not be familiar with, if you have any questions feel free to contact us at the number below, or email techhelp@metalcloak.com

QUESTIONS: Any questions or comments about the instructions? Call us at 916-631-8071 M-F 7:00 AM – 5:00 PM PST.

Section 2: Product Components

DC-0001 REV A



SHEET 1 OF 1

1	2	3	4	5	6	7	8
ITEM	PART NUMBER/DESCRIPTION			QTY.			
1	CP-3711 HEX BAR, SHOCK EXTENSION PIN, JK			2			
E							
D							
C							
B							
A	TOLERANCES UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES DECIMAL FRACTION ANGULAR SURFACE ANGLES ARE 90 DEG UNLESS .XX +/- .010 +/- 1/16 +/- 1 DEG 32 $\sqrt{\hspace{1cm}}$ OTHERWISE SPECIFIED .XXX +/- .005				THE INFORMATION CONTAINED ON THIS DRAWING IS THE EXCLUSIVE PROPERTY OF ARMORED WORKS, LLC. UNAUTHORIZED REPRODUCTION IS PROHIBITED. DO NOT SCALE DRAWING		 A DIVISION OF ARMORED WORKS, LLC
	CURRENT REVISION [A][BAM][01/17/12] PRODUCTION RELEASE			PART NUMBER DESCRIPTION			
	PREVIOUS REVISION []			7041 STOCK SHOCK EXTENSION KIT, JK FRONT			

Section 2: Installation Instructions

Step 1: Preparation for Shock Extension Kit

- A. Unbolt the top of front shocks (Gain access to the top of the shock by opening the hood of the Jeep).
- B. Unbolt the bottom of front shocks (you may need to compress the shock to remove).
- C. Take rubber isolators and washers off of the top of the shock on the top of the shock (threaded side, Save all hardware for re-installation).
- D. Thread the shock extender on top of the shock (threaded side).

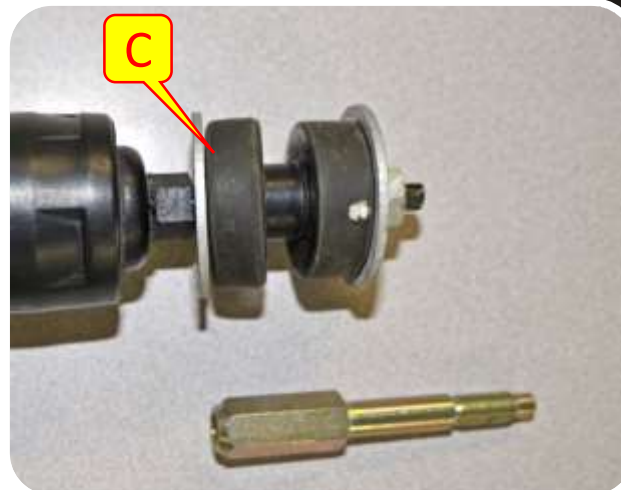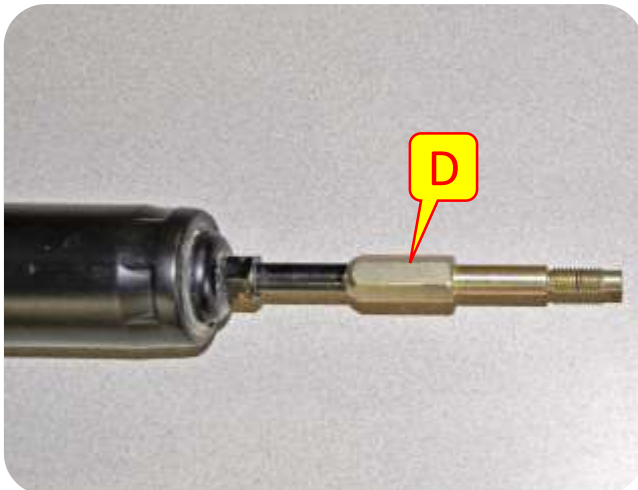

Section 2: Installation Instructions

Step 2: Install Shock Extension Kit

- F. Re-install washer (1) and rubber isolator (2).
- G. Place shock back in location under the Jeep.
- H. Install the upper half of the rubber isolator(1) and washer(2) (threaded side).
- I. Bolt shock back in place with the nut on top and bolts on the bottom.
- J. Tighten to torque specs (56lbs).

