



**PRODUCT: JL Dual Rate Lift Kit, RockSport Black**

REV: C | 04-24-2024 | II-A2125/A2135

**READ INSTRUCTIONS IN FULL BEFORE INSTALLATION.**

**QUESTIONS? CALL 916-631-8071 M-F 7:00 AM – 5:00 PM PST**

The MetalCloak experience includes the ease of installation of our products. We design for most contingencies, but installation may be different based on different Jeep condition, configuration and/or year.

We are continually trying to improve our products and instructions – please help us by providing feedback and pictures if you find any part of the instructions that do not match your particular Jeep or are not easily understandable.

If you have any difficulties at all, please give us a call. Thank you and enjoy your MetalCloak Products!

---

**WARRANTY INFORMATION:** This article is sold without warranty expressed or implied. No warranty or representation is made as to this products ability to protect the user from injury or death. The user assumes that risk. The effectiveness, warranty and longevity of this equipment are directly related to the manner in which it is INSTALLED, USED and/or MAINTAINED. THE USER ASSUMES ALL RISK. By purchasing this product and opening the packaging, purchasers expressly acknowledge, understand and agree that they take, select and purchase these MetalCloak products from Armored Works, LLC, its affiliates and distributors and agents as is and with all faults. The entire risk as to the quality and performance of these MetalCloak products is with the purchaser. Working on your vehicle can be a dangerous activity. If you are unsure of what you are doing, please leave mechanical or safety critical work to a skilled mechanic. We take no responsibility for the incorrect use and/or installation of MetalCloak products.

## Section 1: Tools & Notes on Installation



**Tools Required:** This list is the recommended tools for ease of installation. Other versions of the same tool can be used. For example, Allen Wrenches instead of Allen Drive Sockets. Be sure to use metric on metric and SAE on SAE.



Socket & Ratchet Wrench

Set of SAE & Metric Sockets & Wrenches



Metal Head Hammer

Metric Hex Sockets and/or Hex (Allen) Wrenches



10" Socket Extension

3/8" Flare Nut Wrench (10mm will work) for Brake Lines



Cut-Off Disc and Grinder  
(Optional)

Electric Drill  
1/2" Drill Bits



**HOW TO USE THIS GUIDE:** The installation guide contains ALL steps for installation. Please read and follow the instructions in order of each page top to bottom, and left to right.

**Jeep Model:** Instructions may apply to multiple Jeep models, but are labeled separately where appropriate (i.e. TJ vs. LJ).

**Options:** Because of the number of component options we offer, these instructions may contain steps that will not match your particular configuration. You can skip these steps.

**Images:** Pictures are provided and parts are labeled throughout the instructions. Each text box contains guidance based on the pictures next to it. The text will refer to alphabetical labels (A, B, etc.) found in the images.

**Installation Notes:** Terms may be used in the body of the instructions that you may not be familiar with, if you have any questions feel free to contact us at the number below, or email [techhelp@metalcloak.com](mailto:techhelp@metalcloak.com)

**QUESTIONS:** Any questions or comments about the instructions? Call us at 916-631-8071 M-F 7:00 AM – 5:00 PM PST.

## Section 3: Installation Instructions

**Important Note:** MetalCloak recommends replacing the factory drive shaft. The factory drive shaft binds at transfer case side and the factory drive shaft is too short for additional travel. An aftermarket drive shaft clears t-case and is optimal for maximum travel

Factory Drive Shaft T-Case Bind



Factory Drive Shaft Misalignment



Full Droop

Aftermarket Drive Shaft Correction



Full Droop

## Section 3: Installation Instructions



**Important Note:** *MetalCloak does not recommend powder coating your True Dual Rate Coils. The baking process in powder coating can, in some cases, cause the metallurgical properties of the coils to be changed, resulting in the loss of the lift properties of the coils. As such, the process of powder coating the coils will void any warranty stated or implied in relation to the coils.*

**Important Note:** *To install lift components you will need to fully 'droop' your suspension in the front and rear (not at the same time). We strongly recommend that the vehicle be placed on an automotive lift and that all appropriate safety precautions be taken to secure the vehicle while it is off the ground. Always use the necessary axle stands (or equivalent) to support the axle when the suspension components are disconnected for safety, and to ensure the integrity of your suspension system during the installation process.*



## Section 3: Installation Instructions





### Step 1: Remove Stock Components

- A. Disconnect front sway bar links using a 18MM wrench and 6MM Allen Wrench. **Save all Hardware**
- B. Using a 10MM Socket disconnect the brake line brackets that is attached to the frame. **Save all Hardware.**

**Important Note:** The brake line on the lower front control arms (drivers and passenger side) must be removed from the bracket. It may be pried out or cut; be VERY careful not to damage the brake line!!!

**Important Note:** To help prevent strain on the brake lines MetalCloak recommends clipping all zip ties attached to the brake lines.

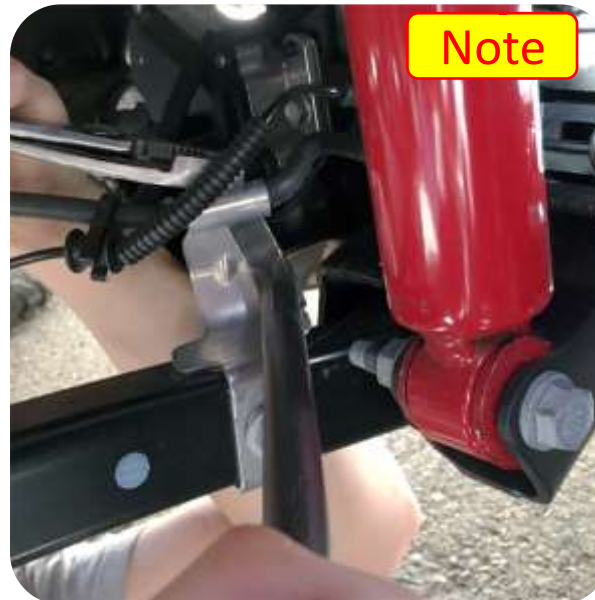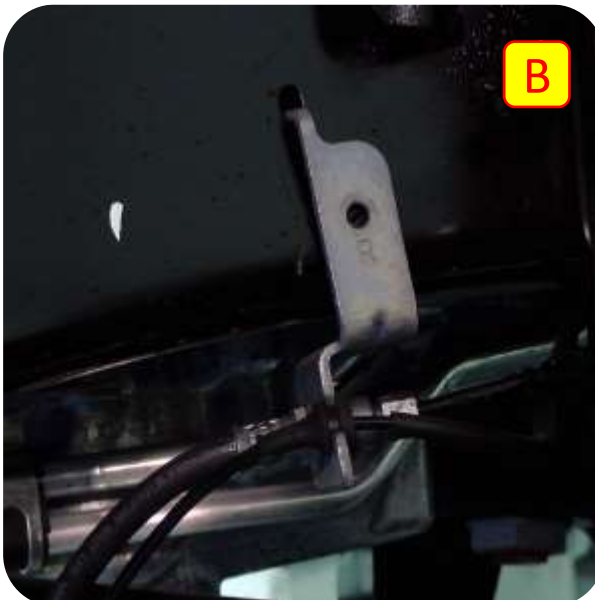


## Section 3: Installation Instructions

### Step 1: Remove Stock Components

**Important Note:** Disconnect any electronics attached to the axle (Locker plug, Front axle disconnect plug, etc.)

- C. Using a 21MM Socket disconnect the stock track bar. Save all hardware.
- D. Use a 18MM Socket and Wrench to remove the shocks. Save all hardware
- E. Remove stock springs, and any spacers that have been used if vehicle has been previously lifted.

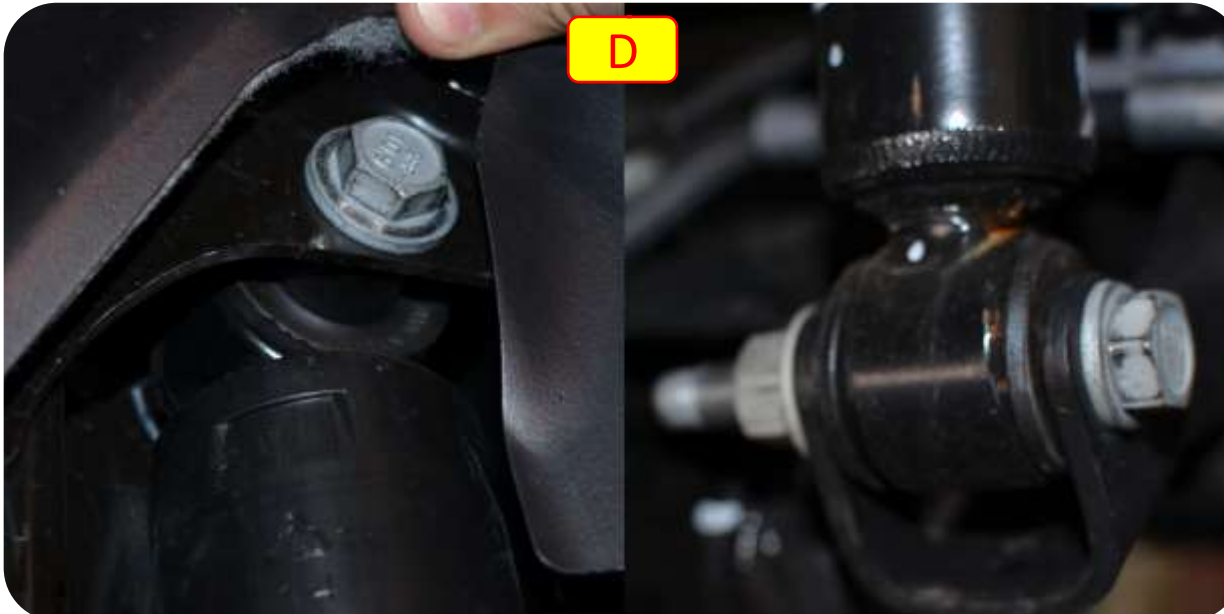

## Section 3: Installation Instructions

### Step 1: Remove Stock Components

F. Disconnect the upper control arm heat shield on both sides at the frame using a 10MM Socket. Save heat shields and all hardware.



# Section 3: Installation Instructions



## Step 2: Install Control Arms


**Important Note:** *These Control Arm Specifications are Just Starting Points. Measured from eye to eye. **ALL JEEPS ARE DIFFERENT.** MetalCloak Recommends Seeing a Suspension Specialist for Correct Control Arm Lengths for **YOUR** Jeep.*

		Front Control Arms		Rear Control Arms	
	Castor Angle	Upper	Lower	Upper	Lower
Factory Control Arms	Stock	20 1/4"	24"	17 1/2"	20"
MetalCloak 2.5"/3.5" Lift	4.5 - 5 Degrees	20"	24"	17 1/2"	20 1/8"

## Step 2: Install Control Arms

**Important Note:** *MetalCloak Recommends installing one control arm at a time. Loosening but not removing all control arm bolts first will make removal easier.*

- G. Use a 18mm Socket & Wrench to remove the stock bolts from the front upper control arms. **Save all hardware.**
- H. Install the MetalCloak Front Upper Control Arm using the stock hardware.

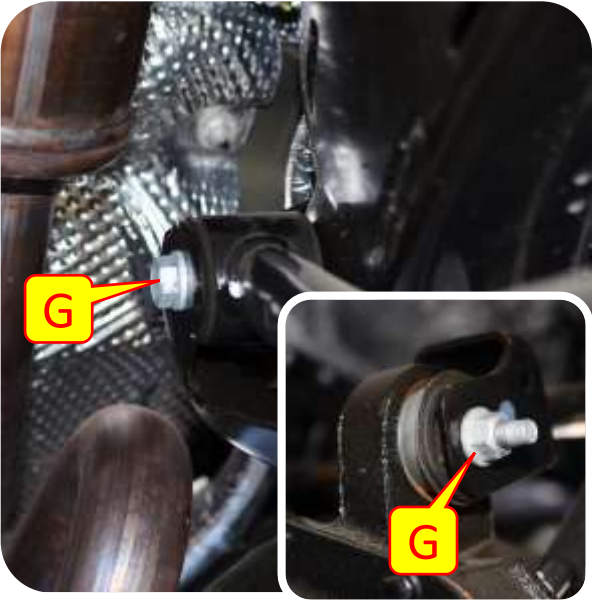






## Section 3: Installation Instructions



### Coil Isolator Information Guide

**Important Note:** MetalCloak's suspension systems include a unique coil design that utilizes upper isolators to position the coil. The following table will help you identify where to install the isolators included with your kit. You must remove the stock isolators before installing the provided coil isolators. If you have any questions give us a call at 916-631-8071.

Coil Isolator Jeep Locations		
Tall Isolator	Jeep Model	Installation Locations
	JL Wrangler 3.6L Non-E Torque	Upper Front Passenger
	JL Wrangler 2.0T E-Torque	Upper Front Driver & Passenger
	JL Wrangler 4xE	Upper Front Driver & Passenger
	JL Wrangler Diesel	Upper Front Driver & Passenger
	JT Gladiator Diesel	Upper Front Driver & Passenger
Short Isolator	Jeep Model	Installation Locations
	JK Wrangler (All Models)	Upper Front Driver & Passenger
	JL Wrangler 3.6L Non-E Torque	Upper Front Driver
	JL Wrangler 3.6L E-Torque	Upper Front Driver & Passenger
	JL Wrangler Turbo	Upper Front Driver & Passenger
	JL Gladiator 3.6L Motor	Upper Front Driver & Passenger
Rear Isolator	Jeep Model	Installation Locations
	JL Wrangler 3.6L Non-E Torque	Upper Rear Passenger
	JL Wrangler 4xE	Upper Rear Driver & Passenger



## Section 3: Installation Instructions

### Step 3: Install Coils and Bump Stops

- I. Using a 10mm socket disconnect the bracket from the spring perch on the axle.
- J. Drill out the center hole using a step bit or you can start your hole with a smaller drill bit and work your way up to a 1/2".
- K. Install the front coils. Make sure the tightly wound coils are oriented upward.
- L. Slip the bottom of the coil onto the coil base on the axle. Rotate the coil until it is seated properly on the coil base.

**Important Note:** If the axle does not droop enough to allow the coil to be put in place a coil compressor can be used to compress the coil to allow fitment.

**Important Note:** Droop your suspension to gain access to the spring perch. Be sure to watch the ABS lines so they do not get over extended and break.

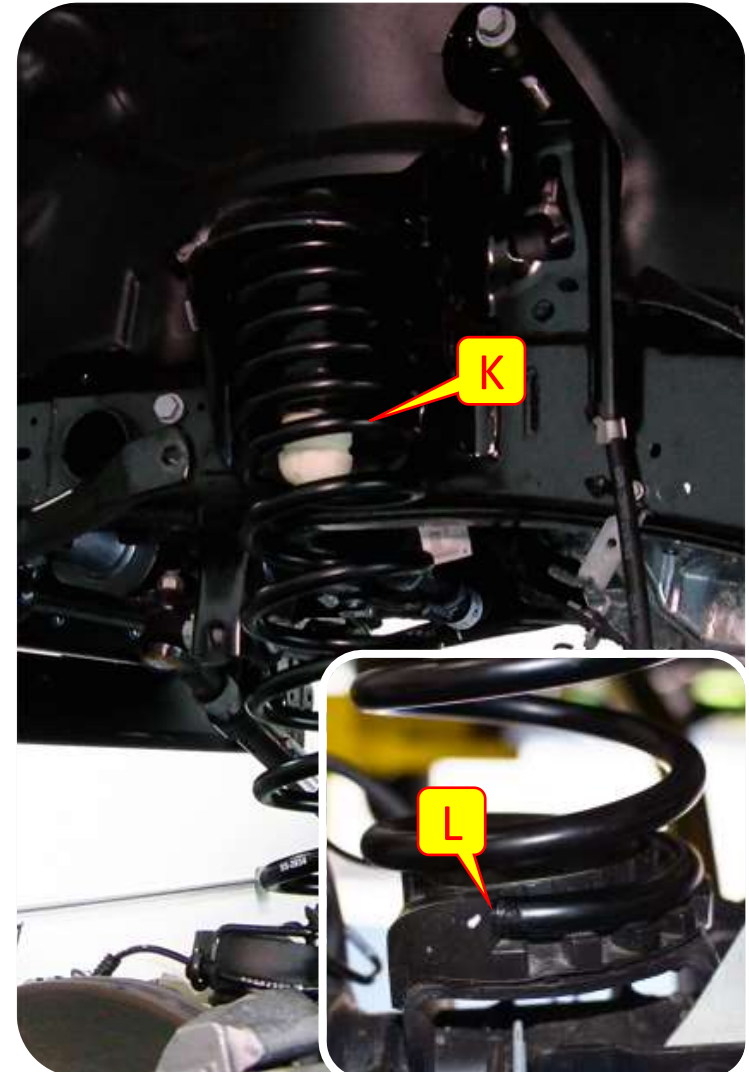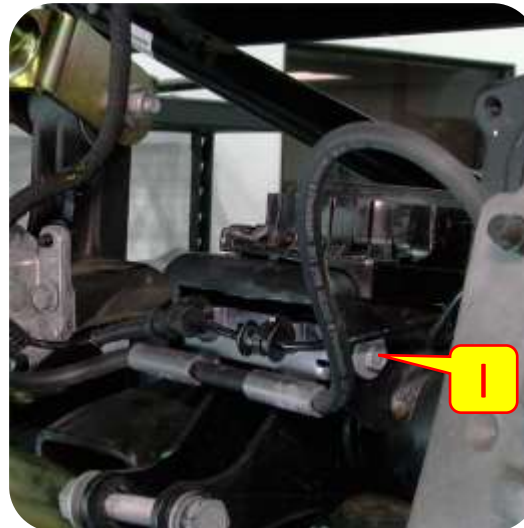

## Section 3: Installation Instructions

### Step 3: Install Coils and Bump Stops

**Important Note:** Your individual build may require an addition or removal of bump stop pucks for your tire size fitment.

M. Select the appropriate Screw length so that the threads stick out of the bottom Disks approximately  $\frac{3}{4}$ ". Assemble your bump stops inside the installed coil by feeding the  $\frac{1}{2}$ " Countersunk Screw through the Cover Plate, and then threading through the Bump Stop Disks. The center hole in the Disk is intentionally small to create the most rigid assembly possible after installation.

N. The  $\frac{1}{2}$ " Screw is backed by a  $\frac{1}{2}$ " Flanged Nylon Lock Nut. Install the nut and tighten the hardware using a  $\frac{5}{16}$ " Hex Key Socket or Allen Wrench and a  $\frac{3}{4}$ " Wrench. Tighten until everything is tight; the hardware will not bottom out, but instead will begin to compress the Disks.








## Section 3: Installation Instructions

### Step 4: Install RockSport Black Front Shock

- O. Place the lower shock mount over the stock shock mount and install the factory 10mm spring perch hardware. Tighten hardware.
- P. Install the provided bolt and nut between the factory shock mount and fully tighten using a 9/16" socket and wrench.
- Q. Install the provide spacer, nut, washer, and bolt and fully tighten using a 19mm wrench and 8mm allen wrench.

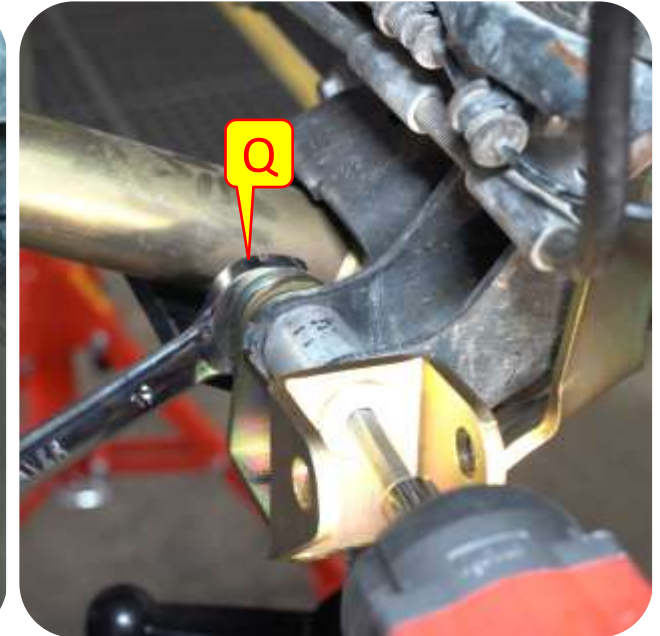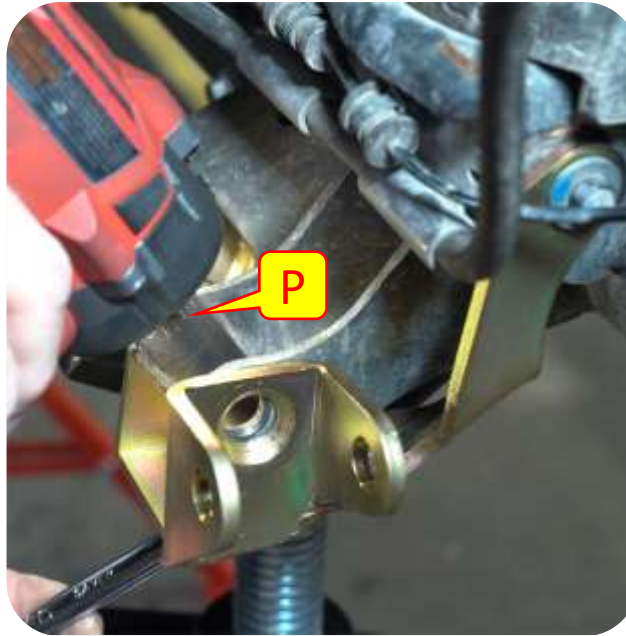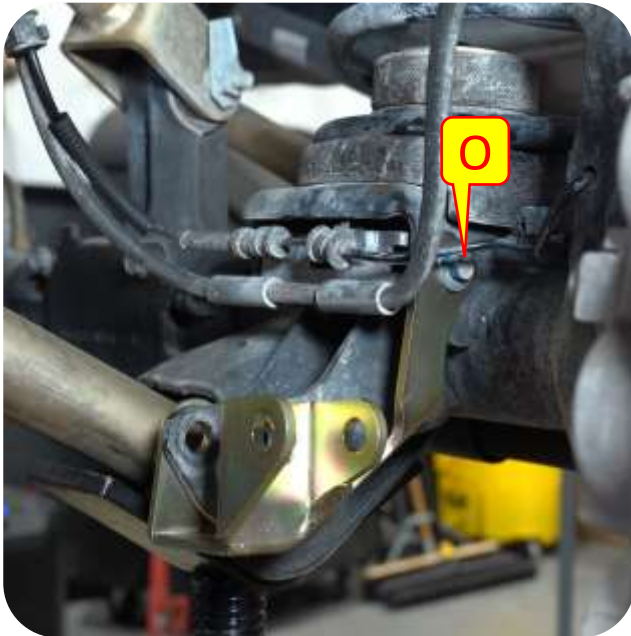





## Section 3: Installation Instructions



### Step 4: Install RockSport Black Front Shock

- R. Align the reservoir mount up to the frame and brake line bracket. Once aligned reinstall the brake line bracket over the reservoir mount with the factory bolt.
- S. Using the provided bolt and flag nut install the part of the reservoir mount that is closet to the spring. We recommend using a pair of plyers to help hold the flag nut into place.
- T. Using a 5/32" allen wrench tighten the reservoir mount bolt closet to the spring.
- U. Fully tighten the brake line bracket using a 10mm socket.

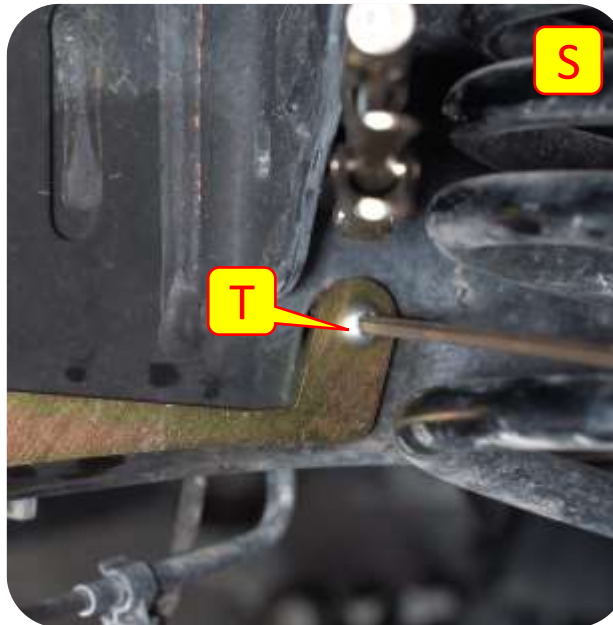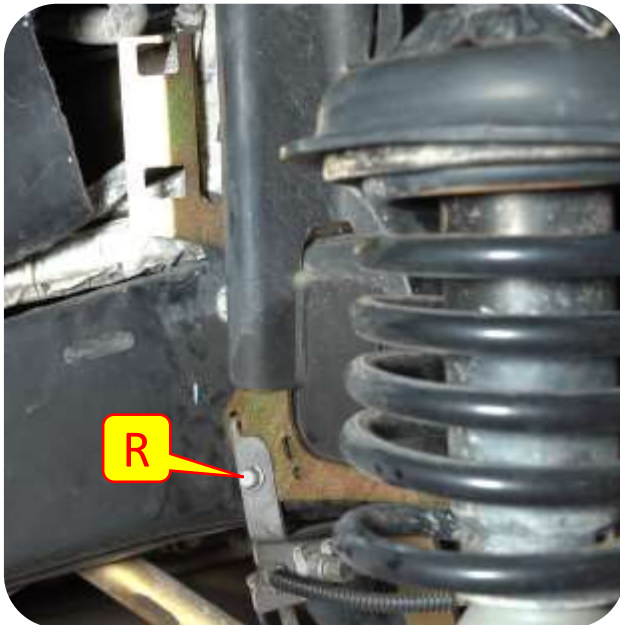

## Section 3: Installation Instructions

### Step 4: Install RockSport Black Front Shock

**Note:** You may be required to modify your inner fender wells to provide enough clearance for the shocks.


- V. Install shock into upper mounting hole and attach with OE bolt.
- W. Install shock eye into lower outboard mount previously installed using supplied ½" bolt and flange nut from mount kit.
- X. Tighten upper and lower shock mounting bolts using a 18mm socket for the upper bolt and a ¾" socket and wrench for the lower bolt.



## Section 3: Installation Instructions

### Step 4: Install RockSport Black Front Shock

- Y. Using the provided hose clamps attach the reservoir to the reservoir mount. Make sure to slide the hose clamps down to align with the holes on the mount (*The image is shown without the reservoir in place to better display the clamp alignment*).
- Z. Using a 5/16" socket tighten down the reservoir hose clamps.

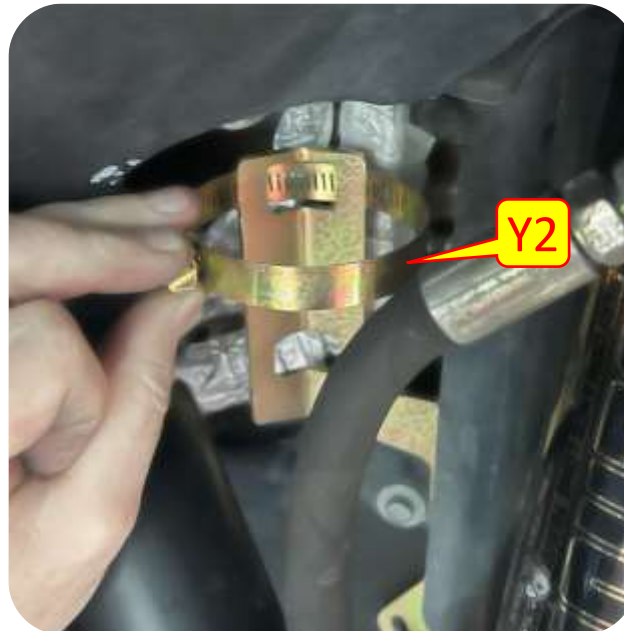




## Section 3: Installation Instructions



### Step 5: Install Front Track Bar

**Note:** Lower the vehicle to the ground before installing the track bar. It is helpful to have someone push the vehicle to the driver or passenger side to help align the hole; if you don't have an extra pair of hands, you can use a ratchet strap on the frame/axle to pull the frame in the desired direction. Lower the Jeep to the ground to ensure the axle is centered once the bolt is in place. If not then remove the bolt, adjust the Track Bar length, replace the bolt, and re-check axle centeredness. Repeat until the axle is as close to center.

- AA. Install the front track bar. Making sure the adjustable end of the track bar goes into the stock bracket on the axle. Re-use the stock hardware.
- BB. Install the fixed end of the track bar into the stock frame bracket. The clearance bends should point towards the front bumper, up and away from the differential cover. Re use the stock hardware.
- CC. Fully tighten the stock hardware on both ends of the Track Bar using a 21MM socket and wrench, and then tighten the Jam Nut on the Track Bar.
- DD. MetalCloak **STRONGLY RECOMMENDS** having your alignment checked by a professional after changing any suspension components.

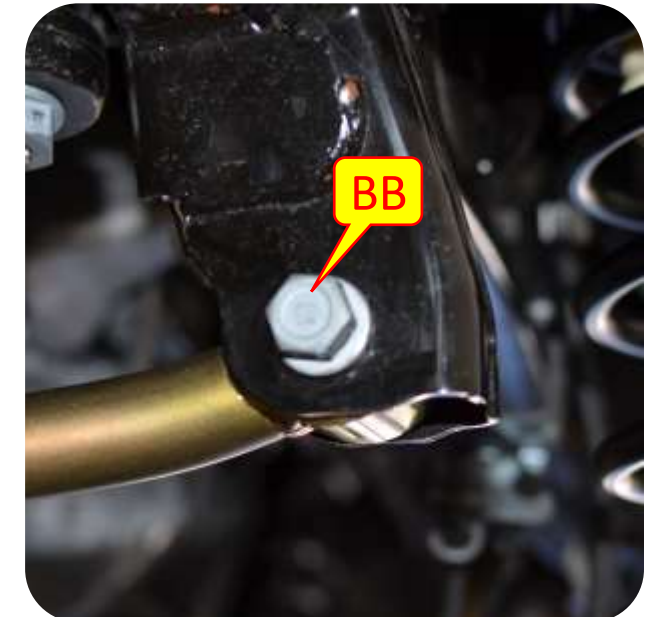



## Section 3: Installation Instructions

### Step 5: Install Front Track Bar

**Note:** MetalCloak uses an over-sized forged housing for additional strength; the factory window pocket may need additional clearance for optimal fitment. Use a die grinder and cutting bit to enlarge the existing window in the factory track bar bracket.





## Section 3: Installation Instructions



### Step 6: Install Sway Bar End Links

- EE. Using the factory hardware install the bottom of the MetalCloak extended sway bar links.
- FF. Using the supplied hardware install the top of the MetalCloak extended sway bar links
- GG. Tighten sway bar end links with an 18MM Wrench for the factory hardware and a 19MM & 18MM wrench for the supplied hardware.

**Important Note:** MetalCloak recommends using red Loctite on each of the upper spindles of the sway bar end links.

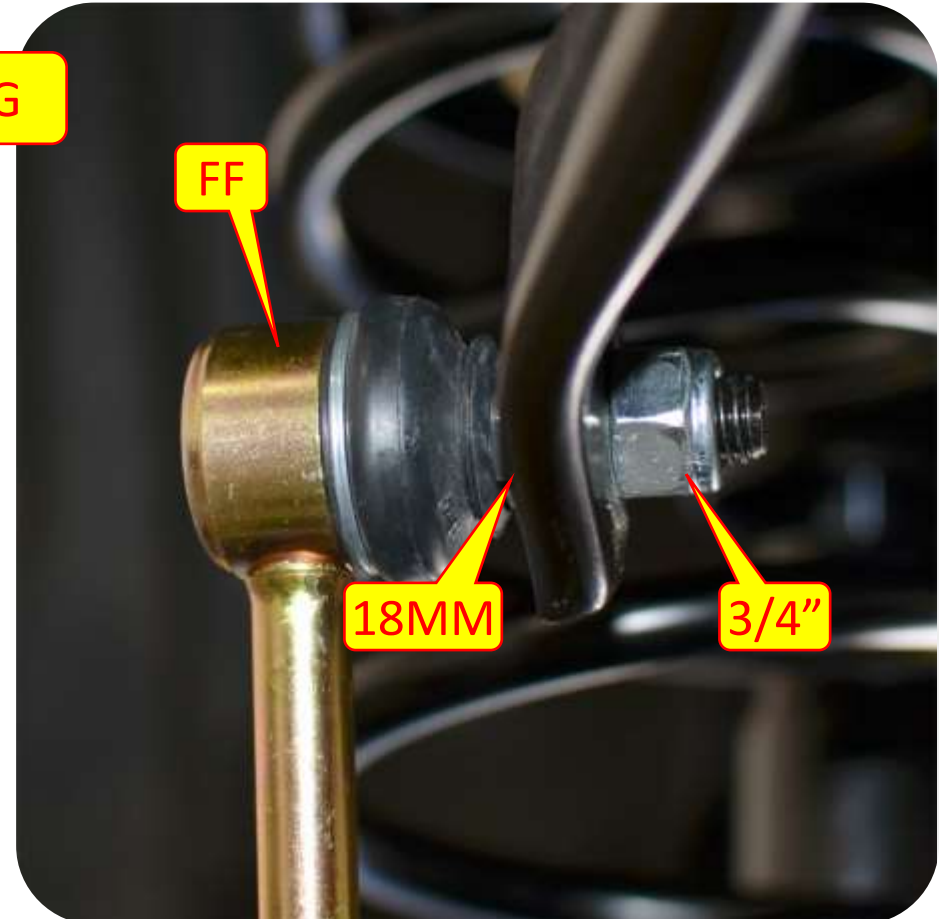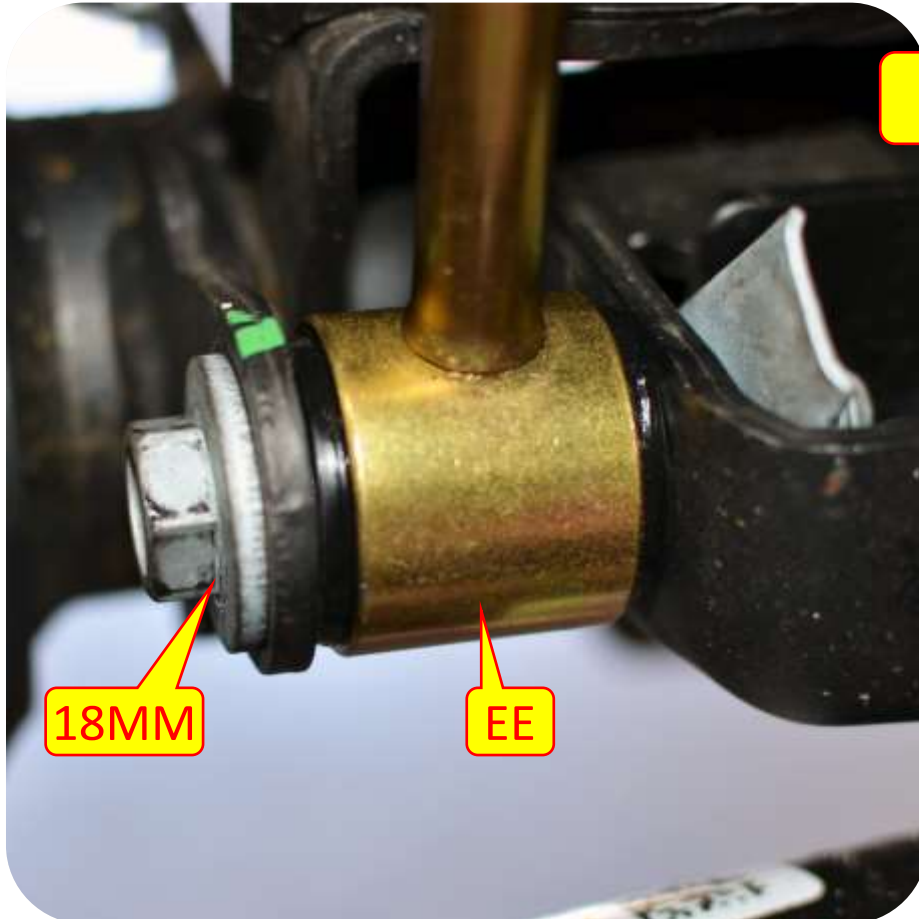

## Section 3: Installation Instructions



### Step 7: Finalize Installation

HH. Adjust the caster angle and toe as needed. Once set, tighten all hardware, Re attach all brackets and reinstall the heat shield. Finally, tighten the jam nuts on all control arms.

**Note:** When lifting any vehicle, basic dynamics are changed. It is important to take your vehicle to a professional for an alignment after installation. Make sure caster setting is adjusted for a lifted vehicle (not stock specs).

## Section 3: Installation Instructions



### Step 1: Remove Stock Components

**Important Note:** MetalCloak Recommends removing the bottom rear fender well plate for easier access to the upper shock bolts by using a 8MM socket wrench.








## Section 3: Installation Instructions



### Step 1: Remove Stock Components

- A. Using a 18mm socket and wrench disconnect the stock shocks. **Save all hardware.**
- B. Disconnect the brake line brackets and E-brake cable on the axle to help allow for full droop.
- C. Disconnect the rear sway bar links using an 18MM wrench and 6MM Allen wrench. **Save all hardware.**
- D. Using a 21MM Socket and wrench disconnect the stock rear track bar. **Save all Hardware.**
- E. Remove Stock Coils.


**Important Note:** Disconnect any electronics attached to the axle (Locker plug, etc.)

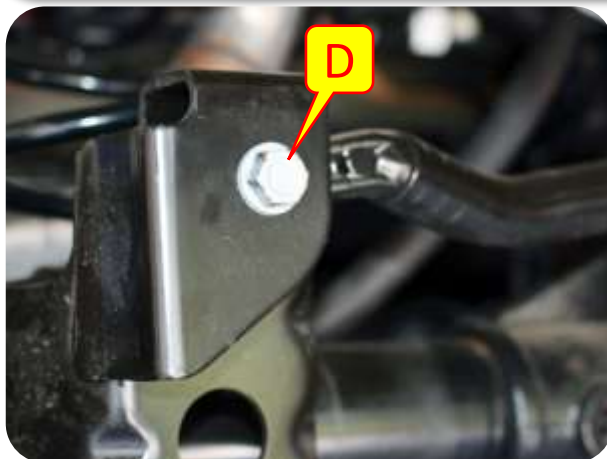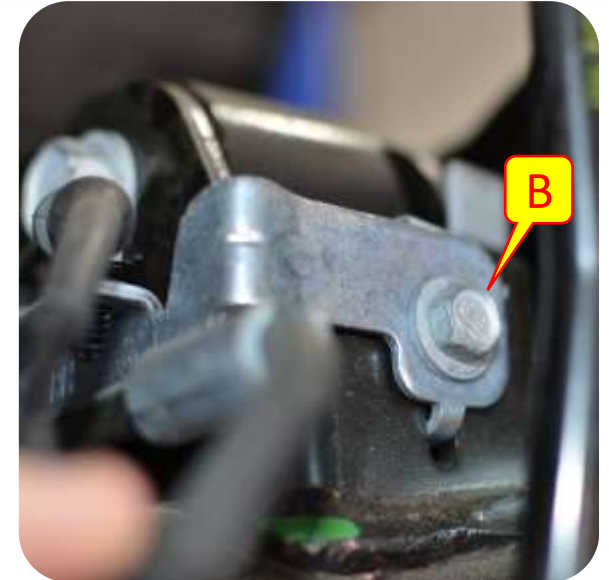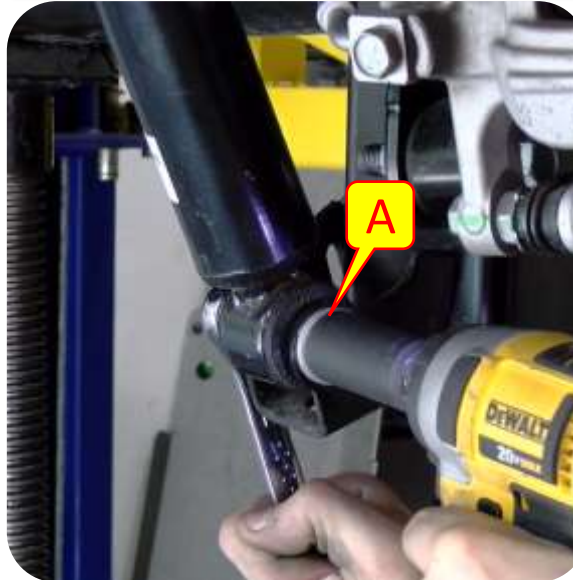

## Section 3: Installation Instructions

### Step 3: Install Rear Coils

- F. Use a 21mm Socket & Wrench to Disconnect the stock rear control arms.
- G. If the axle does not “droop” enough to allow the coil to be put in place a coil compressor can be used to compress the coil to allow fitment.
- H. Place the Rear Coil Cup on top of the Rear Dual Rate Coil.
- I. Install rear Dual Rate Coils with the tightly wound coils oriented upward.
- J. Slip the bottom of the coil onto the coil base on the axle.
- K. Reinstall the stock rear control arms using a 21mm socket and wrench.

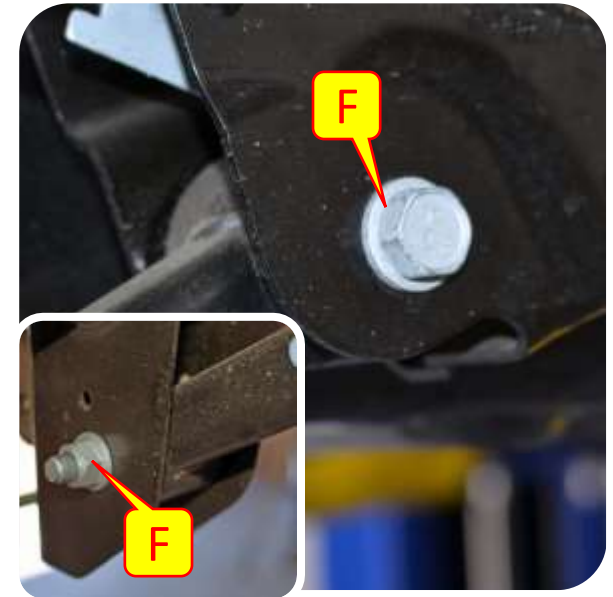

## Section 3: Installation Instructions



### Step 4: Install MetalCloak Track Bar

- L. Loosely Install the MetalCloak Track Bar using the stock hardware.






## Section 3: Installation Instructions



### Step 5: Sway Bar Option 1

- M. Using a 15mm Socket remove the sway bar from the vehicle. **Save All Hardware**
- N. Using a 18mm socket install the 4in drop bracket in the sway bar's stock location using the factory hardware.
- O. When reinstalling the rear sway bar flip the sway bar so that the driver side becomes the passenger side and the passenger side becomes the driver side.

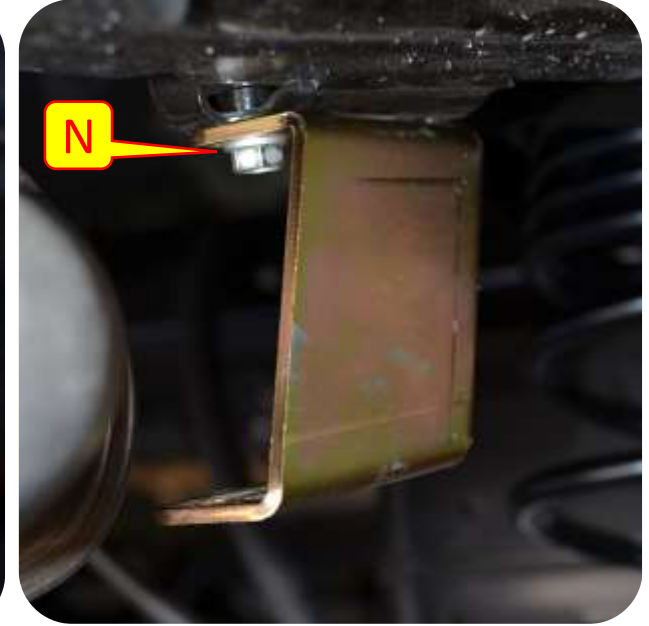





## Section 3: Installation Instructions

### Step 5: Sway Bar Option 1



- P. Using the provided hardware attach the sway bar to the drop bracket and tighten with a 14mm socket and wrench.
- Q. Install the sway bar end links to the sway bar.

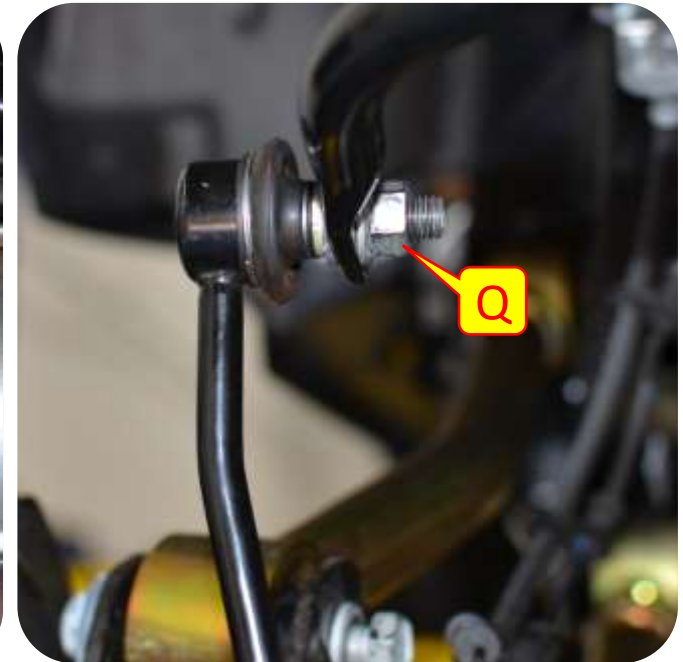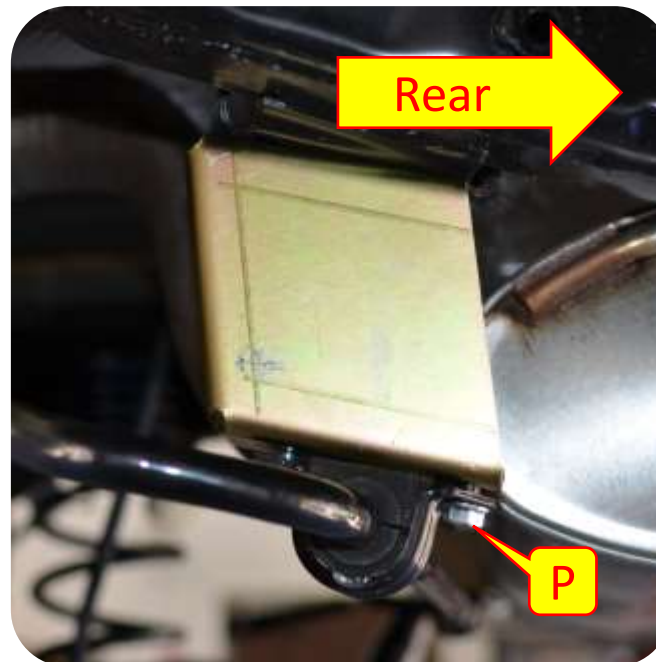

## Section 3: Installation Instructions



### Step 5: Sway Bar Option 2

- R. Using a 15MM socket remove the sway bar mount hardware.
- S. Install the sway bar spacer and tighten the provided hardware using a 17MM socket.
- T. Install the extended sway bar end links on the sway bar.
- U. Install the lower sway bar end link into the stock location using the stock hardware.



## Section 3: Installation Instructions

### Step 6: Install Rear RockSport Black Shocks


- V. Install the rear RockSport Black Shocks using the factory hardware making sure the reservoir is facing rearward.
- W. Tighten the shock hardware with a 18mm socket and wrench.






## Section 3: Installation Instructions

### Step 7: Install Rear Bump Stops

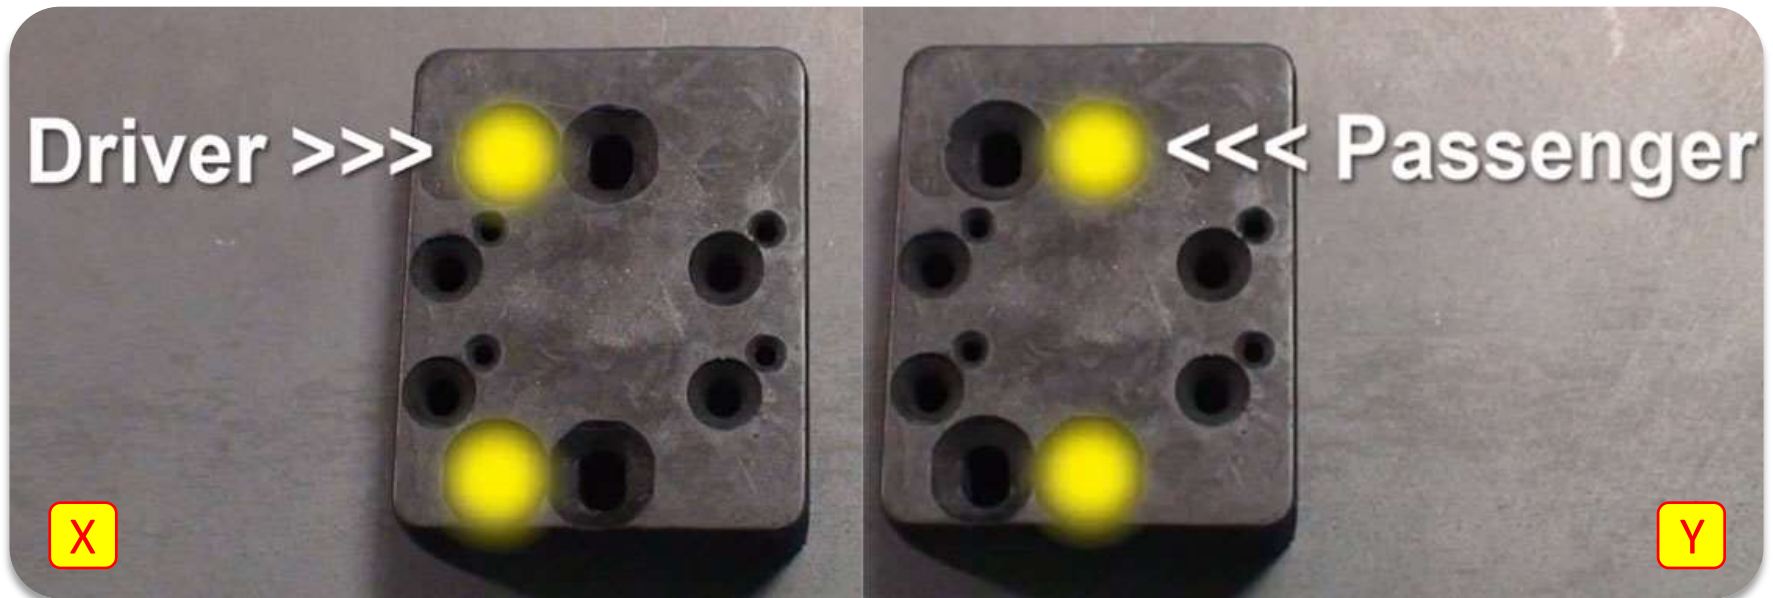

- X. Driver Side Bump Stop Holes.
- Y. Passenger Side Bump Stop Holes.
- Z. Diagram showing the two sides of the Bump Stops.

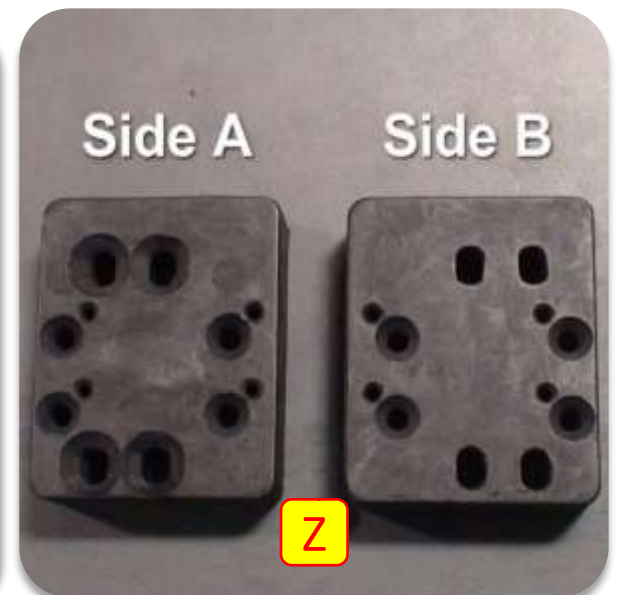

## Section 3: Installation Instructions




### Step 7: Install Rear Bump Stops

- AA. Install first bump stop puck (Side A) using the correct holes (shown in step A and B) using the 5/16 bolt with the matching nut and washer.
- BB. Install next puck (Side B) using the 1 3/4" woodscrews.
- CC. Continue until desired bump stop height (Side A/Side B/ Side A/Side B).



### Step 8: Re-route E Brake


- DD. Disconnect the E brake cables from the brake backing plate.
- EE. Disconnect the E brake cables from the cable bracket.

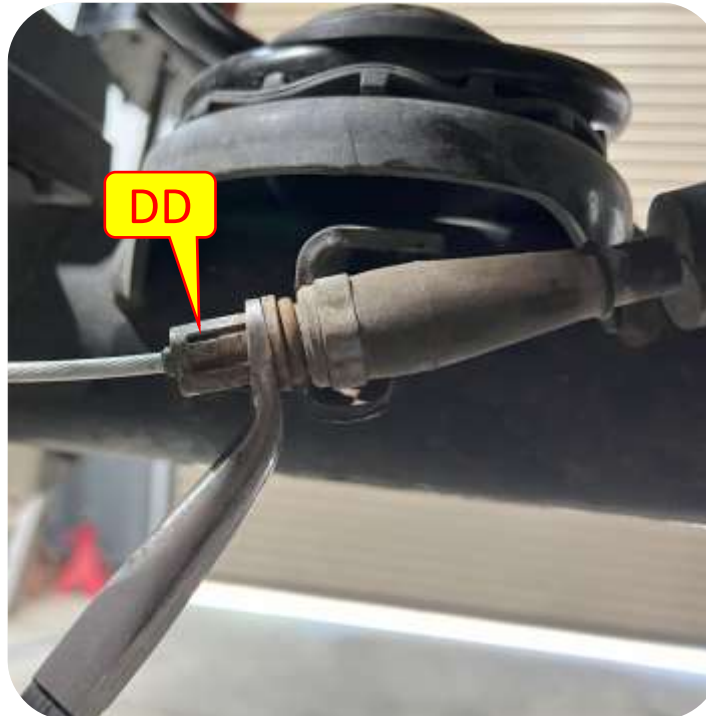

## Section 3: Installation Instructions

### Step 8: Re-route E Brake

- FF. Re-route the E brake cables under the crossmember.
- GG. Reconnect the E Brake cable to the cable bracket
- HH. Reconnect the E Brake cable from the brake backing plate.

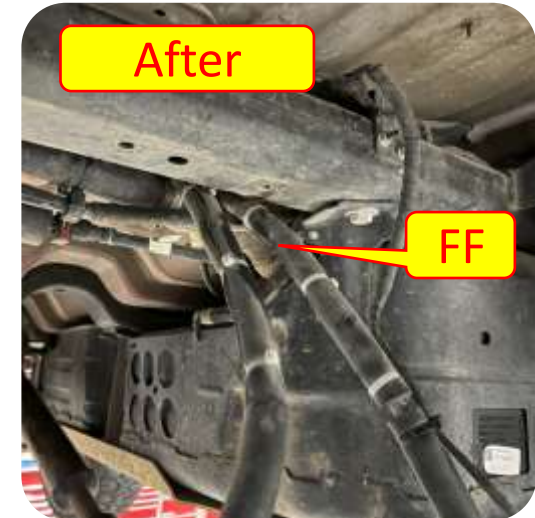

### Step 9: Finalize

- II. Lower the vehicle to the ground before centering the axle. It is helpful to have someone push the vehicle to the driver or passenger side to help align the hole; if you don't have an extra pair of hands, you can use a ratchet strap on the frame/axle to pull the frame in the desired direction. Lower the Jeep to the ground to ensure the axle is centered once the bolt is in place. If not then remove the bolt, adjust the Track Bar length, replace the bolt, and re-check axle centeredness. Repeat until the axle is as close to center. Then tighten the track bar hardware with a 21mm socket.
- JJ. Adjust the caster angle and toe as needed. Once set, tighten all hardware, Re attach all brake line brackets. Finally, tighten the jam nuts on all control arms.

**Important Note:** After re-installing the rear brake line bracket. Bend the brake line bracket in the rear upwards towards the frame to allow slack for extra droop.

